


applies to all utility/extension surfaces mounted on a lift and lock frame

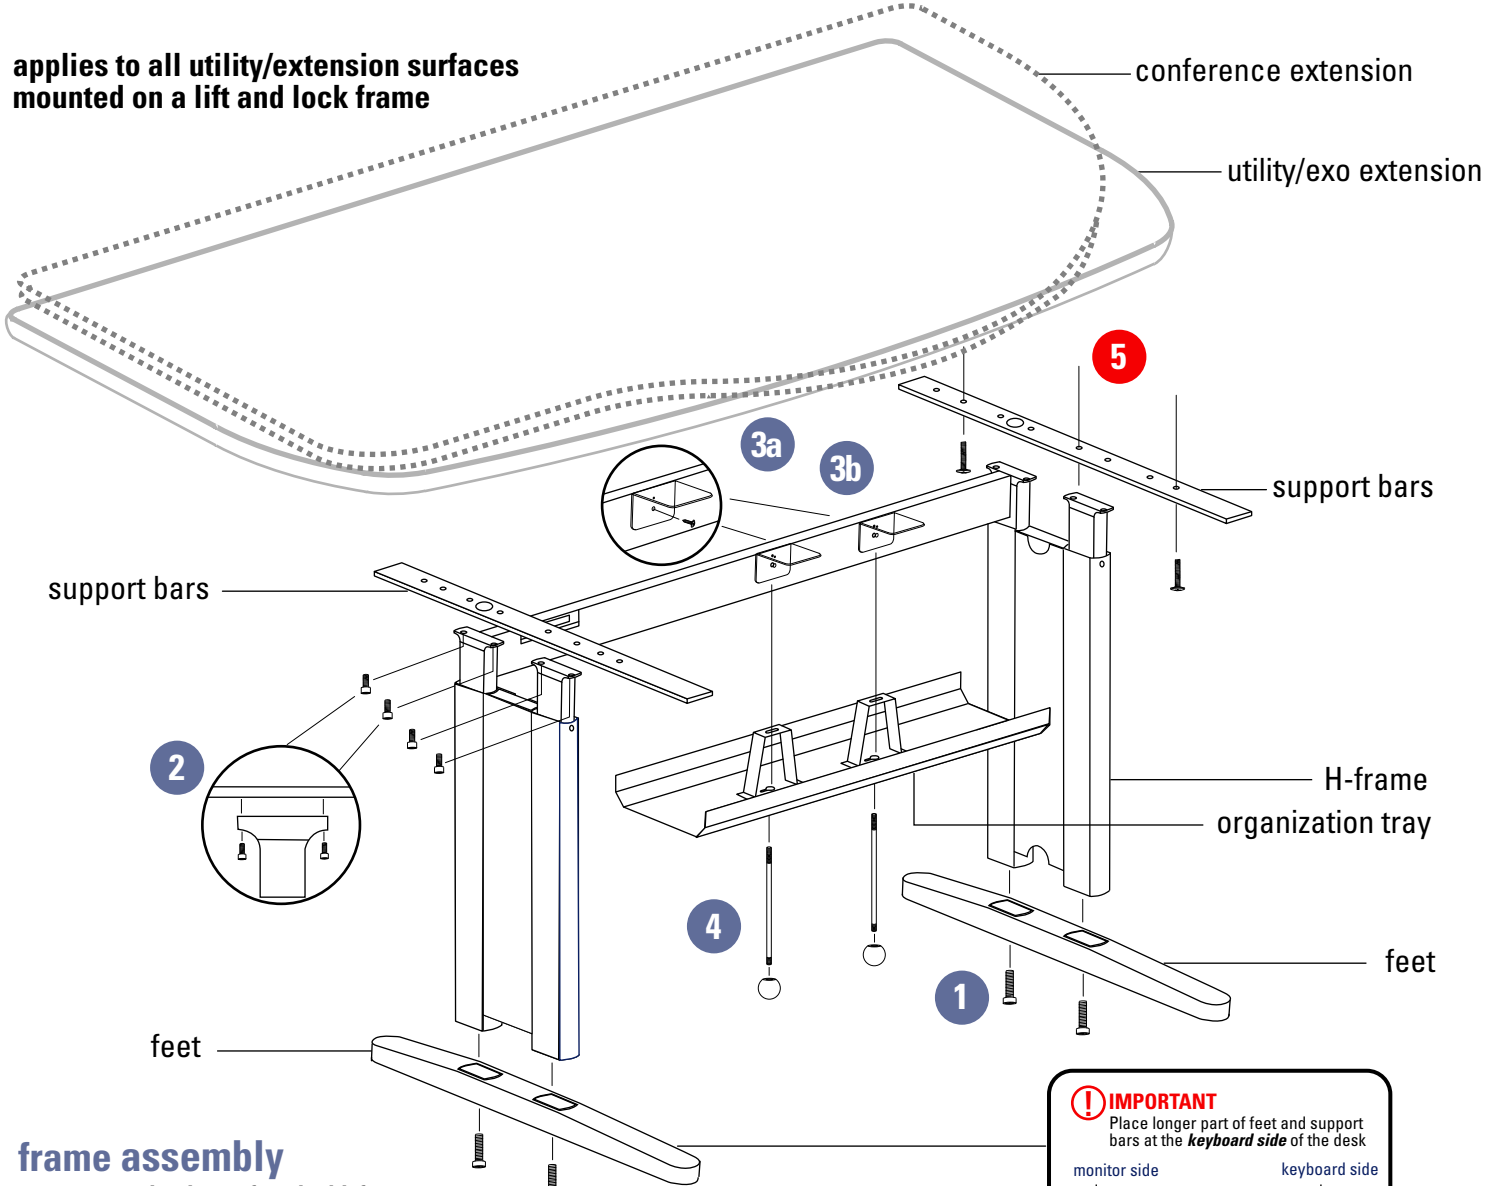

frame assembly

use hardware found with frame

TOOL A. allen wrench supplied w/frame

1" black allen screw x 4 1
use to attach 2 feet to H-frame with tool A

3/4" silver allen screw x 8 2
use to attach 2 support bars H-frame with tool A

TOOL B. philips screwdriver supplied by user

large angle bracket x 2 3a
attach to rear crossbar of H-frame using

1/2" silver screw x 2 with user supplied screwdriver 3b

rod x 2 and plastic ball x 2 4
use to attach organizer tray to large angle brackets

IMPORTANT
Place longer part of feet and support bars at the **keyboard side** of the desk

top assembly

TOOL screw gun w/philips bit

3/4" screws x 6 5
use to attach both surfaces to support bars. Drive into surface.

GROUND SUPPORT EQUIPMENT (U.S.) Ltd.
11 Broadway, space 905, New York, NY 10004, U.S.A.
Tel: 888 302 DESK. (212) 809-4323 Fax:(212) 809-4324.
Email: info@biomorphdesk.com

You are hereby made aware that the content of any material submitted to you [upon your request] by Biomorph/Ground Support Equ. (US) Ltd. in connection with its furniture designs is considered proprietary to Biomorph/Ground Support Equ. (US) Ltd. and protected under federal copyright, trademark and patent laws, and under federal and state unfair competition law. Unauthorized copying, dissemination and/or use, both unintentional and intentional may subject you to payment of damages through legal action. © 2003 Biomorph/Ground Support Equ. (US) Ltd.